

# MICRO-PURE®

## FILTER CHARGE FOR EVERPURE® WATER FILTER



**CHARGE #953**  
FOR MODEL 9



**CHARGE #2053**  
FOR MODEL 20

### SERVICING INSTRUCTIONS FOR EVERPURE® FILTER MODELS 9 & 20

1. Shut off inlet and outlet valves to Everpure Filter. Disconnect unit at unions and take unit to convenient place near a drain and faucet for servicing.
2. Open V-Band Clamp, lift off top and element.
3. Push up inlet tube and remove through inlet union. Disconnect element from top—unlock with counter-clockwise turn, then pull apart. Remove hoops and carefully open out element enough to thoroughly brush-loose and hose-off old charge. Refold element and replace hoops, being careful that folds are evenly spaced and not crimped.
4. Empty and clean shell. Wash top and shell thoroughly with chlorine water (3 tablespoons chlorine bleach per pail of water).
9. Wipe off shell gasket, shell lip and sealing lip of top. Be sure gasket is clean, not twisted, and smoothly in place on shell lip. Replace if worn.
10. Lift top and element (remove plastic bag from new element) and lower into shell. Carefully seat top over gasket and shell lip. Be sure it is even all the way around.
11. Inspect V-Band for damage or stripped threads. The Everpure unit is sealed against pressure with this clamp. Replace damaged or worn parts and make sure clamping flanges are clean.
12. Put on V-Band clamp and tighten until the gap between sections of V-Band (behind latch) is 3/8" or less.

#### WHEN USING A NEW ELEMENT


Unpack Element, and begin charging procedure with the next step. Handle new Element through its protective bag so that sanitizing step No. 7 may be omitted.

5. Make sure "O" ring on element outlet is clean, and smoothly seated. Wet "O" ring for easy slip fit. Assemble element to top by firmly pushing its outlet into top outlet socket; lock with a clockwise turn.
  6. Put inlet tube down through inlet union, so that it is between the same folds as the element outlet. When tube is fully inserted, the lower end will be even with or below bottom edge of element.
  7. To sanitize the element after handling, add 3 tablespoons of chlorine bleach to a nearly full shell of water—slush element in the bath. After several minutes, pour out the chlorine water and set element aside in clean sanitary place.
  8. Fill shell half full of water. Gently pour in all of this MICRO-PURE charge. Stir with paddle until charge is completely mixed, and water looks like shiny, black ink.
  13. Attach unit to piping, making sure that "O" ring in "ball section" of union is in its groove, or that union gaskets are in place to insure a quick easy seal. New union gaskets are available at no cost from factory. To up-date gasketed types, union ball sections with "O" ring seal are also available at nominal cost.
  14. FLUSH the Everpure Filter by setting valves to run outlet water to a drain at unit's full initial flow for 10 minutes: Models 9-4 gallons per minute or more. (If 4 gpm not available for Flushing, lengthen time so at least 40 gallons run through unit.)
- Check completion of Flushing by turning water on and off. When flushing is complete no cloudiness will appear. Everpure filter is now ready for use.

**Contains:** A mixture of powdered activated carbon and powdered diatomaceous earth. Avoid contact with skin, eyes, and clothing. Avoid breathing dust. Do not taste or swallow. Keep container closed. Wash thoroughly after handling.

**CAUTION: MAY CAUSE SKIN, EYE, RESPIRATORY TRACT AND DIGESTIVE TRACT IRRITATION.**

**Keep out of reach of children.**

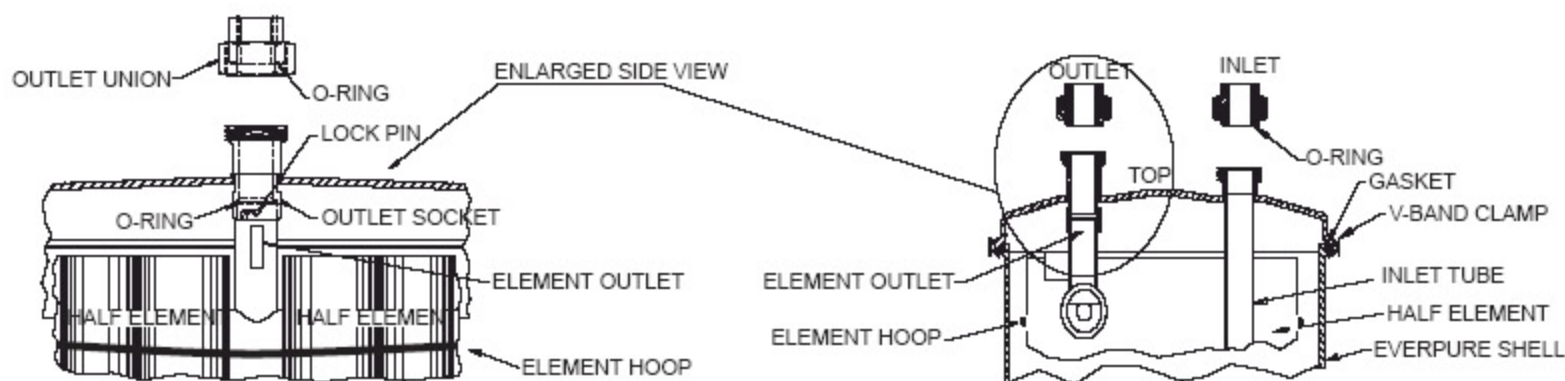

**EVERPURE®**  
WATER YOU CAN TRUST®

In Europe:  
**N.V. EVERPURE (EUROPE) S.A.**  
Research Park, Haasrode  
B-3001 Heverlee • Belgium  
Tel 32-16-401191 • FAX 32-16-402691

**EVERPURE, INC.**  
2375 Sanders Road • Northbrook, IL 60062  
Tel (847) 205-6000 • FAX (847) 205-6030  
Technical Service (800) 323-7873 ext. 5  
<http://www.everpure.com>

In Japan:  
**EVERPURE JAPAN, INC.**  
1-8-19, Tsumada Kita, Atsugi-Shi  
Kanagawa 243 • Japan  
Tel 81-462 (23) 6563 • FAX 81-462 (21) 6775